

## **User and Service manual**

## GL 2002 Contact Grill



## **Table of content**

Table	of content	.2
1.	Introduction	.3
2.	In General	.3
2.1.	Manufacturer	.3
2.2.	Name of the contact grill	
2.3.	Machine tag	
3.	Outline and utilization	.4
3.1.	General description	
3.2.	Purpose of the contact grill and intended utilization	.4
3.3.	Warning on foreseeable misuse	
3.4.	Technical specifikations and consumption	.4
4.	Operation	.5
4.1.	Quick-guide	
4.2.	Safety precaustions made by the user	.5
4.3.	Start	.5
4.4.	Stop	
4.5.	Adjustment	
5.	Storage, transportation and installation	
5.1.	Transportation	
5.2.	Installation	
5.3.	Connection	
6.	Maintenance and repair	
6.1.	Cleaning	
6.2.	Daily maintenance	
6.3.	Repair	
6.3.1.	Specifications for spare parts	
7.	Termination	_
7.1.	Destruction	
8.	Appendix	
8.1.	Signs, symbols and pictograms	
	claration of conformity1	
9.	Accesories1	
9.1.	Wiring diagrams1	2

#### 1. Introduction

#### Original instruktion manual

This manual is a translation of the original instruction manual from FKI Fast Food Teknik of the Turbo Contact Grill GL 2002, - in the following mentioned as the contact grill.

#### <u>Purpose</u>

The purpose of this manual is to ensure proper installation, use, handling and maintenance of the contact grill.

#### Accessibility

The instruction manual must be kept in a – to the staff – well known place which is easy to access for electricians and personnel who maintain the contact grill.

#### **Knowledge**

The employer (owner of the contact grill) is obligated to ensure that people who operates, serve and maintain the contact grill, has read the instruction manual or as minimum are familiar with the parts which are relevant to their job.

Furthermore, everybody who operate, serve and maintain the contact grill is obligated to seek information in this manual.

#### 2. In General

#### 2.1. Manufacturer

The contact grill are manufactured by

Company name: FKI Fast Food Teknik A/S Adress: Byghøjvej 5, Verninge

5690 Tommerup

#### 2.2. Name of the contact grill

The full name of the contact grill are Turbo Grill GL 2002.

#### 2.3. Machine tag

The machine tag is placed on the rear.

#### 3. Outline and utilization



#### 3.1. General description

The contact grill is a manually operated contact grill for quick frying of burgers, steaks and more. The temperature of both pans is regulated by an analog thermostat between 50-250 °C. The upper pan is adjustable by a spring system, and therefore its pressure on the meat can be adjusted by means of a knob in the middle of the front. This makes it possible to use the turbo grill for both frozen and defrosted/fresh products.

#### 3.2. Purpose of the contact grill and intended utilization

The contact grill is designed for fast frying of meat product by frying both sides at the same time.

#### 3.3. Warning on foreseeable misuse

Never use the contact grill for defrosting, warm keeping or cooking.

#### 3.4. Technical specifikations and consumption

#### Overall dimensions

Hight x with x depth: 210 x 495 x 610 mm

Weight: 40 kg

#### **Electricity**

Connection power: 3 x 400 V AC (Norway: 3 x 230V)

Connection frequency: 50/60 Hz

Absorbed current: 10.8 A (18.8 A by 230V)

Absorbed power: 6.6 kW

#### **Noise**

Airborne noise coming from the contact grill:

Measured sound pressure level dB(A): <45

### 4. Operation

#### 4.1. Quick-guide

The contact grill is equipped with 2 heating zones, right and left, which are operated by a thermostat for respectively right and left sides. The contact grill is turned on by turning the thermostat to the desired temperature. The thermostat regulates the temperature of both the upper and lower pan. A lamp next to the thermostat is lightning when the heating elements are active.

During warm up, the temperature should be set to about 100 ° C. Then you have to wait for the heat to spread into the pans and the lights to shut off. Now set the thermostat to the desired temperature and let the pans heat up until the lights again shuts off before the contact grill is ready for use.

Check the temperature with a thermometer to assure the desired temperature is reached, since the calibration of the thermostat may not reflect the exact setting on the knob.

#### 4.2. Safety precaustions made by the user

It is recommended that the user wears heat protecting gloves when working with the contact grill, since both pans are very hot. Do not touch the pans when working with the contact grill.

#### 4.3. Start

The contact grill is turned on by twisting the thermostat knobs on the front.

#### 4.4. Stop

The contact grill is shut off by twisting the thermostat knob to 0.

#### 4.5. Adjustment

The top shell (pan) weight / pressure can be adjusted by turning the handle on the front of the machine. Turning counter clockwise increases the weight of the pan and turning clockwise decreases the weight.

#### 5. Storage, transportation and installation

#### 5.1. Transportation

The contact grill should only be transported when attached to a transport pallet

#### 5.2. Installation

The contact grill must be set on a suitable surface, table top or the like. The feet of the contact grill are adjustable and should be adjusted so the contact grill is higher in the back than in the front. This to ensure that frying fat can easily flow to the drain.

Note that there must be free passage of air behind the contact grill, under the contact grill and in the front of the contact grill

#### 5.3. Connection

The connection cable shall be fitted with an appropriate 400V plug (not part of the delivery) and connected to a wall switch

Connection without plug is only allowed after a safety switch.

A certified electrician shall make connection.

#### 6. Maintenance and repair

#### 6.1. Cleaning

After each frying the pans must be scraped, free of excess fat, so that this is not burnt onto the pans. This to prevent odour and smoke as a result. First, scrape off excess fat of the upper pan and then scrape off excess fat from the pan and to the grease drain in front of the left.

Remember to empty the fat drawer regularly

#### 6.2. Daily maintenance

with cloth or paper.

At least one times a day the contact grill shall be cleaned after it has cooled down to <50°C.

The pans shall be cleaned for fat and food residues. Use a scraper or steel spronge together with grease solvent. Wash with clean water and dry off

The fat drawer is to be emptied and washed. Dishwasher may be used.


Cabinet surfaces shall be dried off with a damp cloth using a mild detergent. Wipe with dry cloth or paper towel.

#### 6.3. Repair

Authorized service personnel with knowledge of electrical appliances should always perform Repairs.



## 6.3.1. Specifications for spare parts

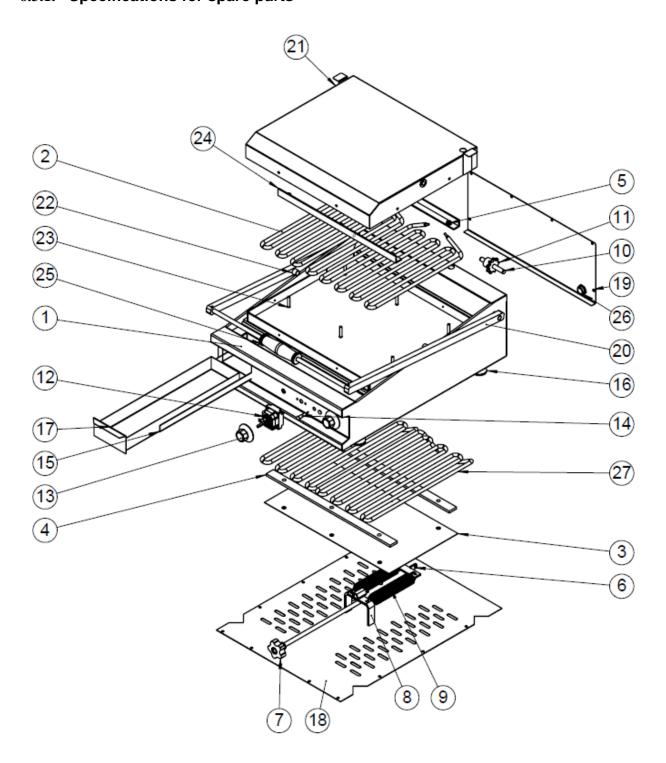

Pos.	Part no.	Pcs.	Description
1	15-02002	1	Cabinet complete welded
2	83-09074	2	Heat element 1,5 kW 400V upper
2a	83-09073	2	Heat element 1,5 kW 230V upper (Norway)
3	83-08749	1	Cover plate
4	83-08889	2	Tightening bracket
5	78-04580	18	Nut M6
6	83-08747	1	Bracket for chain/spring
7	83-09901	1	Adjustment knob
8	83-08748	1	Guide for spring
9	83-08780	2	Spring
10	83-09342	1	Tap Ø10 x 80 mm
11	83-06391	1	Chain wheel
12	82-06577	2	Thermostat 3-pole
13	83-08202	2	Knob 50-250°C
14	83-07507	2	Lamp yellow
15	83-08757	1	Guide for fat drawer
16	82-06510	4	Leg M8, adjustable
17	83-08756	1	Fat drawer
18	83-08761	1	Bottom plate
19	83-08760	1	Cover plate rear
20	83-08764	1	Handle assy
21	15-08770	1	Top shell assy
22	83-08744	2	Distance tube
23	83-08755	1	Pan, upper
24	83-08745	2	Tightening bracket
25	82-06539	1	Handle
26	72-03529	1	Cable gland PG 16
27	83-09083	2	Heat element 1,8 kW 400 V lower
27a	83-09085	2	Heat element 1,8 kW 230V lower (Norway)

#### 7. Termination

#### 7.1. Destruction



The contact grill is marked with the above recycling symbol (EC directive 2002/96/EC) and must be disposed in accordance with your country's order.

This means that when the product becomes obsolete, you should dispose it after the local municipality's rule, e.g. in unsorted waste stream

### 8. Appendix

#### 8.1. Signs, symbols and pictograms

The contact grill is marked with the following symbols and pictograms:



Recycling symbol (see 7.1)



Hot surface – use gloves

### **EC** declaration of conformity

# EF-overensstemmelseserklæring 2006/42/EF bilag II A

		<b>J</b>		
Fabrikant: Navn Adresse Postnr. og by	FKI Fast Food Tek Byghøjvej 5, Vern 5690 Tommerup			
Erklærer hermed at mask	ine type:			
- Turbosteger	GL 2002			
Er fremstillet i overensstemmelse med følgende EF direktiver:				
- 2006/42/EF	Maskindirektivet			
og følgende nationale sta	ndarder og tekniske	specifikationer:		
- EN 60204-1	Elektrisk Materiel på	Maskiner		
Søren Poulsen Direl Underskriver Stilling		Verninge Sted	05.10.2011 Dato	
Onderskriver Stilling	<del>J</del>	Jieu	Dato	

## 9. Accesories



#### Teflon foil for Turbo grill

Model	Product no.
	Top Pan
GL 2002	01-10080
	Bottom Pan
GL 2002	01-30930

#### Scraper

Model	Product no.
Scraper	03-70905



**Steel sponge**Cleans without scratching the grill plate.

	The state of the s
Model	Product no.
Steel sponge	01-69000



#### Palette Knife

Model	Product no.
Palette knife	01-69018




400V

Ledningsfarver:


Sort
Gul
Blå
Brun
Rød

Alle ledninger  $1,5^{\square}$ 

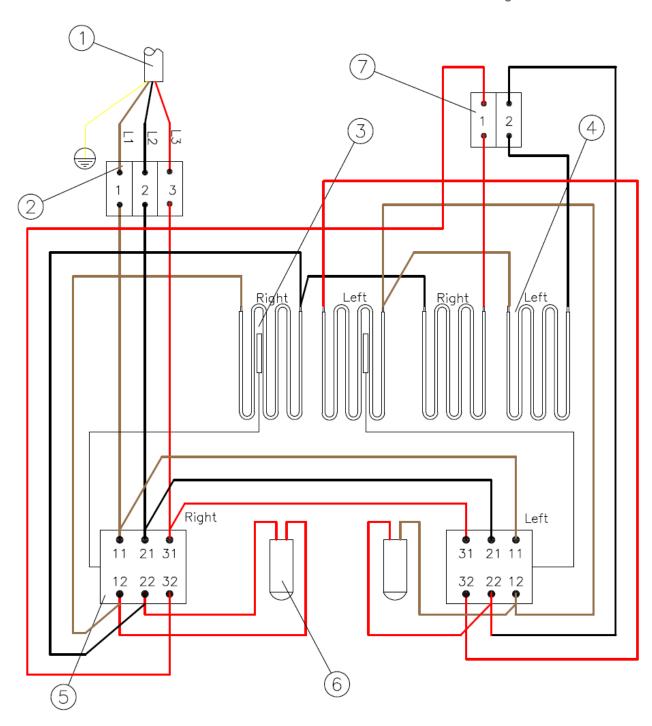

Pos.	Part no.	Pcs.	Description
1	72-03528	1	Connection cable 4 x 2,5 mm <sup>2</sup>
2	72-03509	1	Connector 3-pole ceramic
3	83-09083	2	Heat element 1,8 kW 400V lower
4	83-09074	2	Heat element 1,5 kW 400V upper
5	82-06577	2	Thermostat 3-polet with capillary tube
6	83-07507	2	Lamp yellow
7	72-03508	1	Connector 2-pole ceramic

## 230V Norway

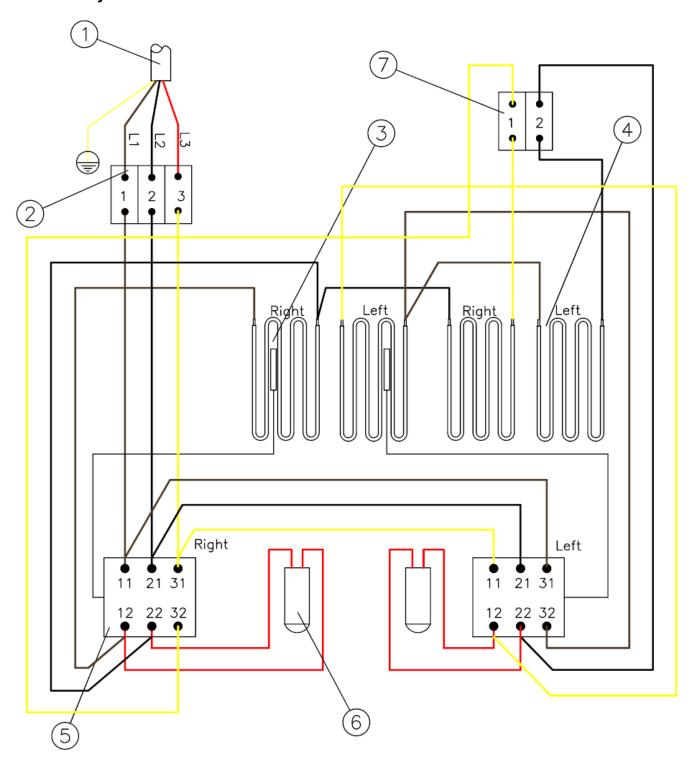

Pos.	Varenummer	Antal	Benævnelse
1	72-03528	1	Connection cable 4 x 2,5 mm <sup>2</sup>
2	72-03509	1	Connector 3-pole ceramic
3	83-09085	2	Heat element 1,8 kW 230V lower
4	83-09073	2	Heat element 1,5 kW 230V upper
5	82-06577	2	Thermostat 3-polet with capillary tube
6	83-07507	2	Lamp yellow
7	72-03508	1	Connector 2-pole ceramic



Byghøjvej 5, Verninge – DK-5690 Tommerup – Danmark Tlf. +45 6475 1066 – info@fki.dk – www.fki.dk